## · Scania

To connect a rearview camera (with or without motorized shutter) at Scania AUS4 (Harman) monitor.


The straight HSD connector from model ADP-39S must be connected to Camera 1 input (purple) from the Scania AUS4 (Harman) monitor.

The yellow wire from model ADP-39S must be connected to position E9 in the ISO connector from the Scania AUS4 (Harman) monitor.

## Note!

Canbus activation must be selected ON by Scania workshop (in case not yet selected by Scania factory).

\* In case 2 cameras are required (rearview and sideview), then interface model IF AUS4-2C(H) should be applied, instead of model ADP-39S.

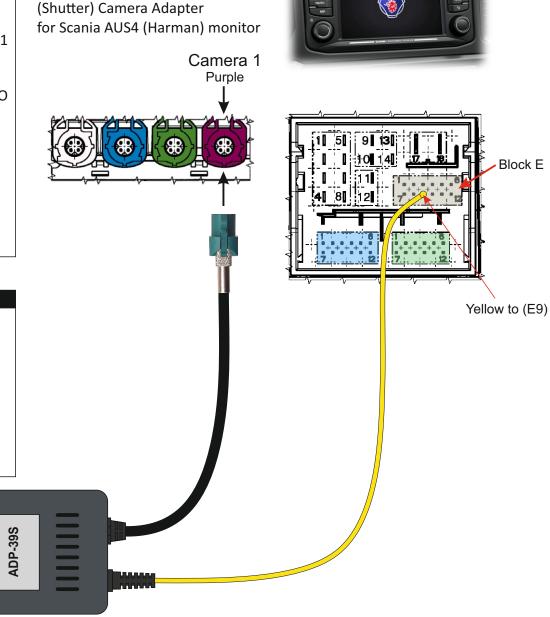

ADP-39S

